


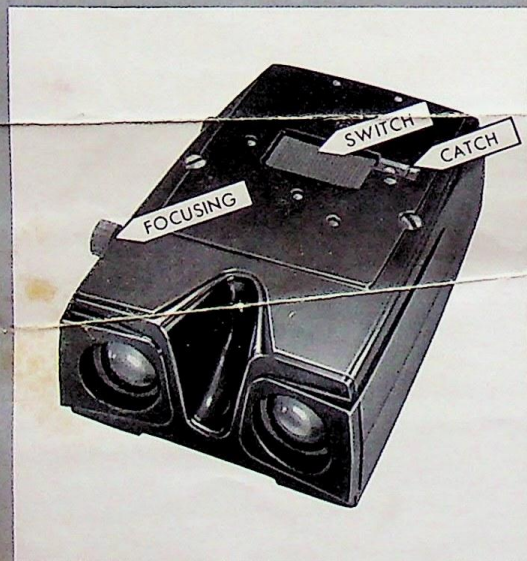

Kodaslide Stereo Viewer II



1

Plug the lamp cord into a 105-120 volt line.

2

Insert a stereo slide (1½x4 inches) in the slide holder with the pictures upright.

3

Depress the SWITCH on the bottom of the viewer. The switch can be held in the locked position by the CATCH.

4

Focus the slide by turning the FOCUSING knob.

5

Adjust the spacing between the eyepieces by moving the INTEROCULAR lever until this space is suitable for your eyes.

6

Rotate the RHEOSTAT knob to vary the brightness of the lamp.

When the lamp burns out, obtain a 6-watt, 80-volt, S-6 clear, candelabra base lamp from your Kodak dealer. Loosen the two coin-slotted screws on the bottom of the viewer. Remove the cover, lift out the lamp socket, and change the lamp.

Hints for using the viewer

Try to cut out as much extraneous light as possible by holding the viewer close to the eyes. If you wear eyeglasses you may use the viewer to better advantage if you remove your glasses.

Your Kodaslide Stereo Viewer II can be converted from line voltage to battery illumination.

1 With a coin loosen the two screws on the bottom of the viewer; then remove the cover.

*** 2** Lift out the rheostat and the 80-volt lamp socket.

3 Rack the slide holder forward as far as it will go. Remove the white reflector. Screw a miniature base flashlight lamp, such as the GE No. 245, into the socket behind the slide carrier.

4 Replace the reflector and make sure the outside edges fit into the grooves provided. Put two "D" size batteries in the battery compartment; one with its top forward, the other with its top to the rear, as illustrated. Replace the cover and secure it with the coin-slotted screws.

Eastman Kodak Company • Rochester 4, N. Y.

4-55-CH-CX

PRINTED IN THE UNITED STATES OF AMERICA

