

# How to Use Your



# KODAK **disc** 6000 Camera




You are now an owner of a unique camera, one that will allow you to take pictures in practically any situation—from bright sunlight to low-lighted scenes. With this camera, you can capture scenes of stage acts, sporting events, receptions, etc.

One of the features of this camera—the close-up focus selector—allows you to take those very close shots of your friends or the flowers in your garden.

For detailed information about your camera, please read this instruction manual and the Information Booklet for the *KODAK DISC* Camera.

Equipment subject to minor appearance changes.

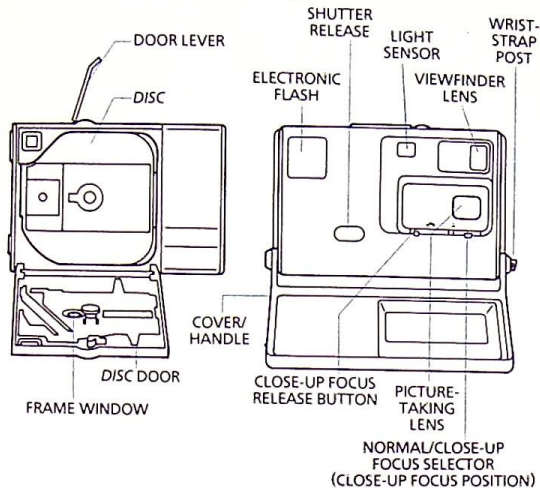

## EASY TO LOAD...

**1.** Lift the DOOR LEVER to its fully open position and open the DISC DOOR. Insert the DISC. The DISC fits only one way. Close the disc door until it is fully latched. Then push the door lever back into place.



HORIZONTAL



VERTICAL  
(Flash at top)

## SHOOT...

**2.** Open the COVER/HANDLE to its fully open position. At this time, the disc will automatically advance to the number one frame. After each exposure, it will advance to the next frame. See the FRAME WINDOW on the back of the camera.

Your camera is now ready for normal picture-taking situations. Follow the instructions through Step 6. To use the NORMAL/CLOSE-UP FOCUS SELECTOR on your camera, read the section, NORMAL/CLOSE-UP FOCUS SELECTOR, after Step 6.

**3.** Using the cover/handle, hold the camera firmly, keeping your fingers away from the PICTURE-TAKING LENS and the ELECTRONIC FLASH. Frame your subject in the viewfinder—no closer than 4 feet when in the normal focus position.

**4.** Gently squeeze the SHUTTER RELEASE. If the flash is needed, it will fire automatically.

**5.** After picture-taking, close the cover/handle to protect the lens and to prevent accidental depression of the shutter release.

**6.** When you've taken 15 pictures, the camera will not operate, and you will see the symbol x in the frame window. Open the disc door and remove the fully exposed disc.

**NORMAL/CLOSE-UP FOCUS SELECTOR**—The selector has two positions. Use the normal position (marked with a  $\curvearrowright$ ) for subjects more than 4 feet away from your camera. Use the close-up position (marked with a  $\curvearrowleft$ ) for subjects between 1½ to 4 feet away from your camera. When you use the camera lens in the close-up position, your subjects must stay within the above range or they will be out of focus. Very close objects, such as flowers, people, etc, are excellent subjects for the close-up lens feature.

The selector will return to the normal position by one of three ways: (1) depress the CLOSE-UP FOCUS RELEASE BUTTON next to  $\curvearrowright$ ; (2) slide the selector back to the normal focus position; (3) close the cover/handle.

*Your camera contains an ULTRALIFE Energy Source, which is covered under the 5-year warranty. Do not attempt to disassemble this camera. For help with picture-taking problems and detailed information about your camera, see the Information Booklet for the KODAK DISC Camera packed with your camera.*