

MINOX


MINOCOLOR®

COLOR NEGATIVE FILM—ASA 80 FOR COLOR PRINTS

A fast, fine grain film that yields color negatives from which color prints can be made. The film is suitable for picture-taking in daylight and for indoor snapshots with MINOX flash units.

This film is supplied in MINOX cartridges of 15 and 36 exposures.

CAUTION: Watch the exposure counter. After you have taken the final exposure, push-pull (and release) the camera twice before removing the cartridge.

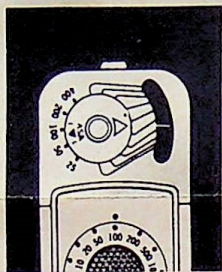

EXPOSURE/SHUTTER SETTING INFORMATION: For MINOX B: Before loading film into camera, set ASA dial with 100 dot (·) centered between the left ASA line and the black triangle.

For MINOX C: Set the ASA dial to 80. (One dot to the right of 100).

For shutter settings without exposure meter, the following settings may be used as a guide for most average subjects outdoors in daylight from 2 hours after sunrise to 2 hours before sunset:

Bright or Hazy Sun		Cloudy-Bright	250
Front-lighted subjects	1000*	Cloudy-Dull	125
Side-lighted close-ups	500	Open Shade	125

* For light subjects (people in light-colored clothing), or light surroundings (bright buildings, bright beach or snow), use built-in neutral density grey filter.

For flash pictures with blue flash cubes or AG-1B flashbulbs, set shutter speed at 30 or 20.

Camera-to-Subject
Distance

Use
Filter

6-10 feet
15-22 feet

Neutral Density
None

The above flash distance ranges are approximate for subjects and surroundings of average color and contrast. For darker subjects, shorten the distance; for very bright subjects, extend the distance. For flash pictures with the Minox Electronic Flash Unit, follow directions supplied with unit.

FOR BEST RESULTS – follow the instructions and suggestions contained in your MINOX Owner's Manual. Here are a few reminders: Before loading – set the exposure counter at the correct starting position. Load or unload your MINOX only in subdued light, or in the shade.

Open the film gate! The film cartridge can be inserted – or removed – **ONLY** with an open film gate. If the cartridge does not drop flush into the film compartment, the back cover cannot be closed. Do not use force. Lift out the cartridge; push-pull the camera slightly, re-insert the cartridge with open film gate and close the back cover. Always store film – exposed or unexposed – in a cool, dry place. Do not leave film or your loaded MINOX in the glove compartment or on the window shelf of your car, nor in other hot places.

PICTURE TAKING. Your MINOX viewfinder shows you the exact picture area, so you can move close to your subject until it fills the viewfinder for best results. Use the measuring chain for accurate distance setting of close-ups.

Hold the camera correctly to keep fingers away from exposure and lens windows. S-q-u-e-e-z-e (don't jab) the shutter release button; avoid jarring the camera. For exposures of $1/30$ sec or longer, place the camera on a table, ledge or similar support, or use the convenient Minox Pocket Tripod.

CAUTION: Fingerprints or other smudges on the lens window may spoil the sharpness and brilliance of your pictures. If necessary, clean the window gently with a (dry!) cotton swab or soft linen cloth wrapped around a matchstick or toothpick.

DEVELOPING AND PRINTING SERVICE. Exposed films should be developed as soon as possible. We suggest you return the exposed cartridge to your dealer for fine quality finishing by Minox Custom Service, or you may obtain from your dealer a convenient Minox Custom Service prepaid processing mailer. If there is no dealer in your area, replace the cartridge in its original container and mail it in an envelope addressed to: MINOX CUSTOM SERVICE, P. O. Box 2032, New York, N.Y. 10001. Be sure to include your return address and finishing instructions.

NOTICE: This film will be replaced if defective in manufacture, labeling, or packaging, or if damaged or lost by us, even though by negligence or other fault. Except for such replacement, the sale, ~~processing or other handling of this film for any purpose, by us~~ or any affiliated company, is without other warranty or liability. Since color dyes may change in time, this film will not be replaced for, or otherwise warranted against, any change in color.

MINOX USA

25-20 Brooklyn-Queens Expressway West, Woodside, New York, 11377
MINOX T.M. Reg. U.S. Pat. Off. Printed in Germany
